

Introducing and removing remote controls to the M357T/M357TV2

It is advisable for the dealer to introduce new remote controls into the alarm system.

NB. All remote controls must be pre-coded to the number issued on the orange card supplied with the alarm. The override pin-code from the card is also required to access the programming routine.

Please ensure that you have these details before commencing.

- 1. Disarm the system either by remote control or override code.
- 2. Within 10s, turn on the ignition 3 times and keep it on (beep on third activation)
- 3. Turn the ignition off within 10s.
- 4. Enter the override code from the Orange code card.
- 5. Leave the ignition on when you have entered the fifth digit of the override code.
- 6. The buzzer will confirm the correct entering of the code by the signal (bip-bip-bop-bop)
- 7. Transmit once with the new remote control to be enabled (LED lit on)
- 8. Transmit a second time with the same remote control for confirmation (confirmation beep). If the system emits a 'boop', the operation was wrong; repeat the operation.
- 9. Now the new remote control is enabled and meanwhile, all those previously stored in the memory are disabled.
- 10. Carry out, now, as described above, the double transmission of all other remote controls to be enabled (including the originals).
- 11. Turn the ignition off. The system indicates that the programming is over by the signal (bip-bip-bop-bop).
- 12. The LFD will emit the same number of flashes as the number of remote controls enabled.